



AUFBAUANLEITUNG

SCHRITT 1

Schraube die **Rauchsäule** in die **Base**.

SCHRITT 2

Schraube das **Tauchrohr** in die Unterseite der **Base**. Sollte sich ein **Diffusor** und/oder eine **Tauchrohrverlängerung** mit im Lieferumfang befinden, schraube diese ebenfalls an die Unterseite des **Tauchrohres**.

WICHTIG: Die Unterseite des Tauchrohres hat eine **Aussparung**. Diese **Aussparung** ist genau passend für den **Diffusor**.

SCHRITT 3

Befülle die **Bowl** nun mit kaltem Wasser. Den richtigen Wasserstand kannst du ganz einfach ermitteln. Das **Tauchrohr** bzw. der **Diffusor** sollte ca. 2 cm oberhalb der Grenze ins Wasser ragen.

SCHRITT 4

Wenn du **Rauchsäule**, **Base** und **Tauchrohr** zusammengeschaubt hast, kannst du die Teile nun auf das **Bowlgewinde** ansetzen und handfest zuschrauben. Beim ansetzen bitte stets darauf achten, dass das **Tauchrohr** nicht beim zusammensetzen auf das **Bowlgewinde** oder die **Bowl** schlägt. Dies kann zu Beschädigungen am **Bowlgewinde** oder Rissen im Glas der **Bowl** führen.

SCHRITT 5

Nun schraube die **Muffe** in ein Loch der **Base**, lege die **Kugel** hinein und schraube den **Schlauchanschluss** bzw. das **Ausblasventil** auf die **Muffe**. Wiederhole diesen Schritt je nachdem wie viele **Schlauchanschlüsse** oder **Ausblasventile** du bestellt hast.

SCHRITT 6

Falls du eine Pfeife mit intigriertem **Schliffadapter** bestellt hast, stecke diesen nun von oben in die **Rauchsäule**. Falls deine Pfeife keinen intigrierten **Schliffadapter** besitzt, kannst du diesen Schritt ignorieren.


SCHRITT 7


Setze nun mit einer Hand den **Teller** von oben auf die **Rauchsäule** oder den **Schliffadapter** und konter diesen mit dem **Kopfadapter**. Diesen ebenfalls handfest anziehen. Auf dem **Kopfadapter** wird später dein Tabakkopf aufgesteckt.

SCHRITT 8

Stecke nun das **Schlauchendstück** in den **Schlauchanschluss**. An dem **Schlauchendstück** wird später dein Schlauch angebracht.

Fertig! Viel Spaß beim rauchen.

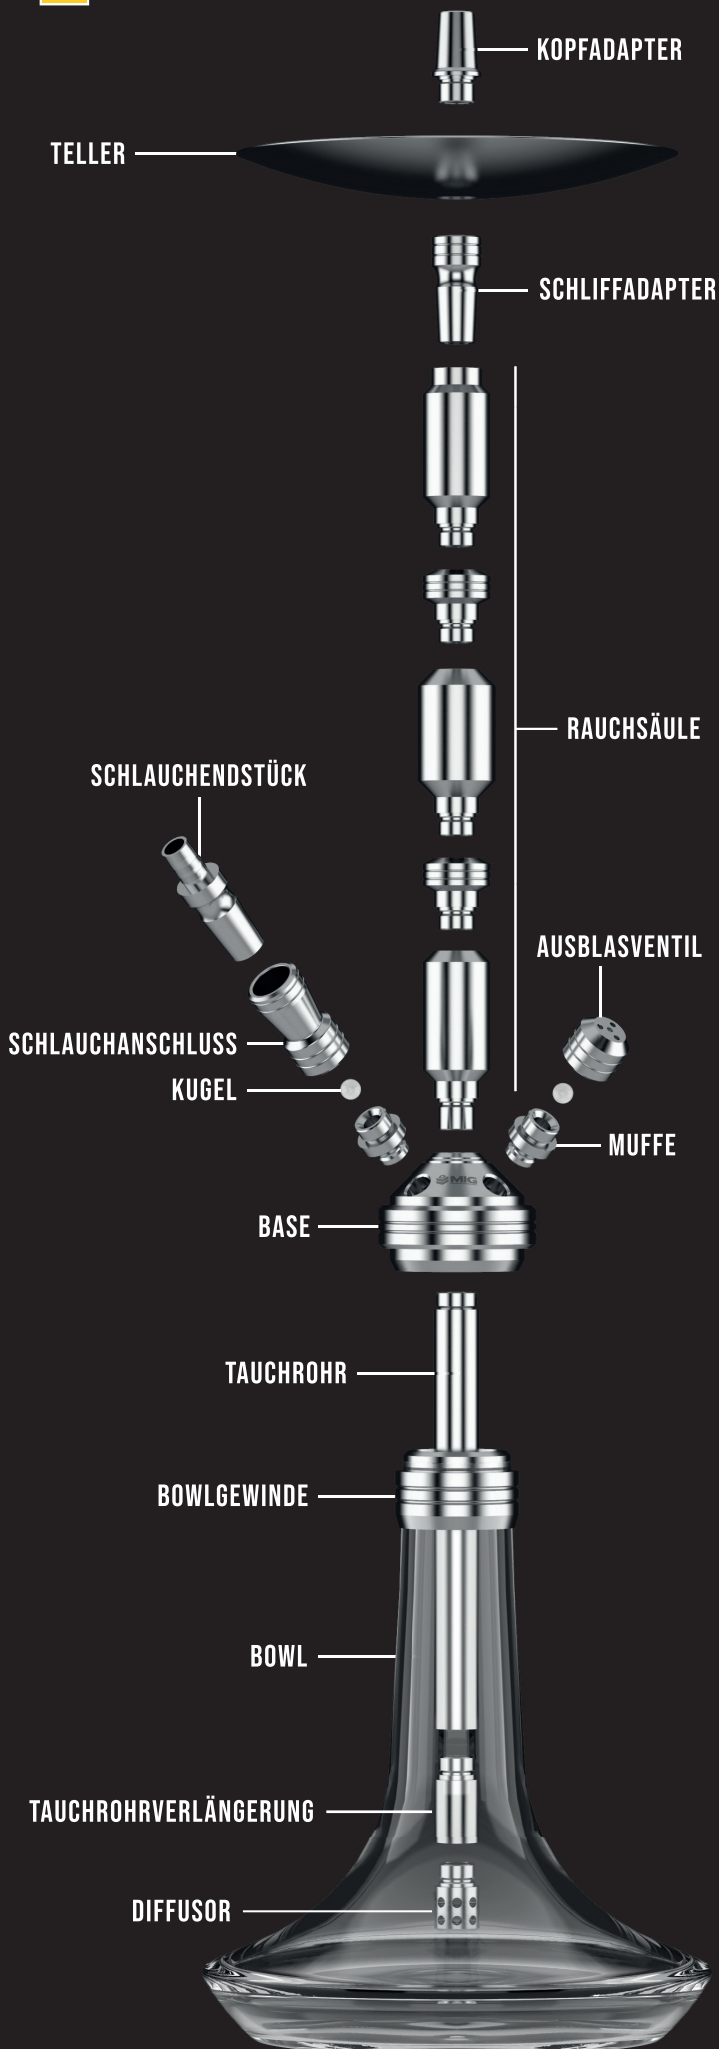

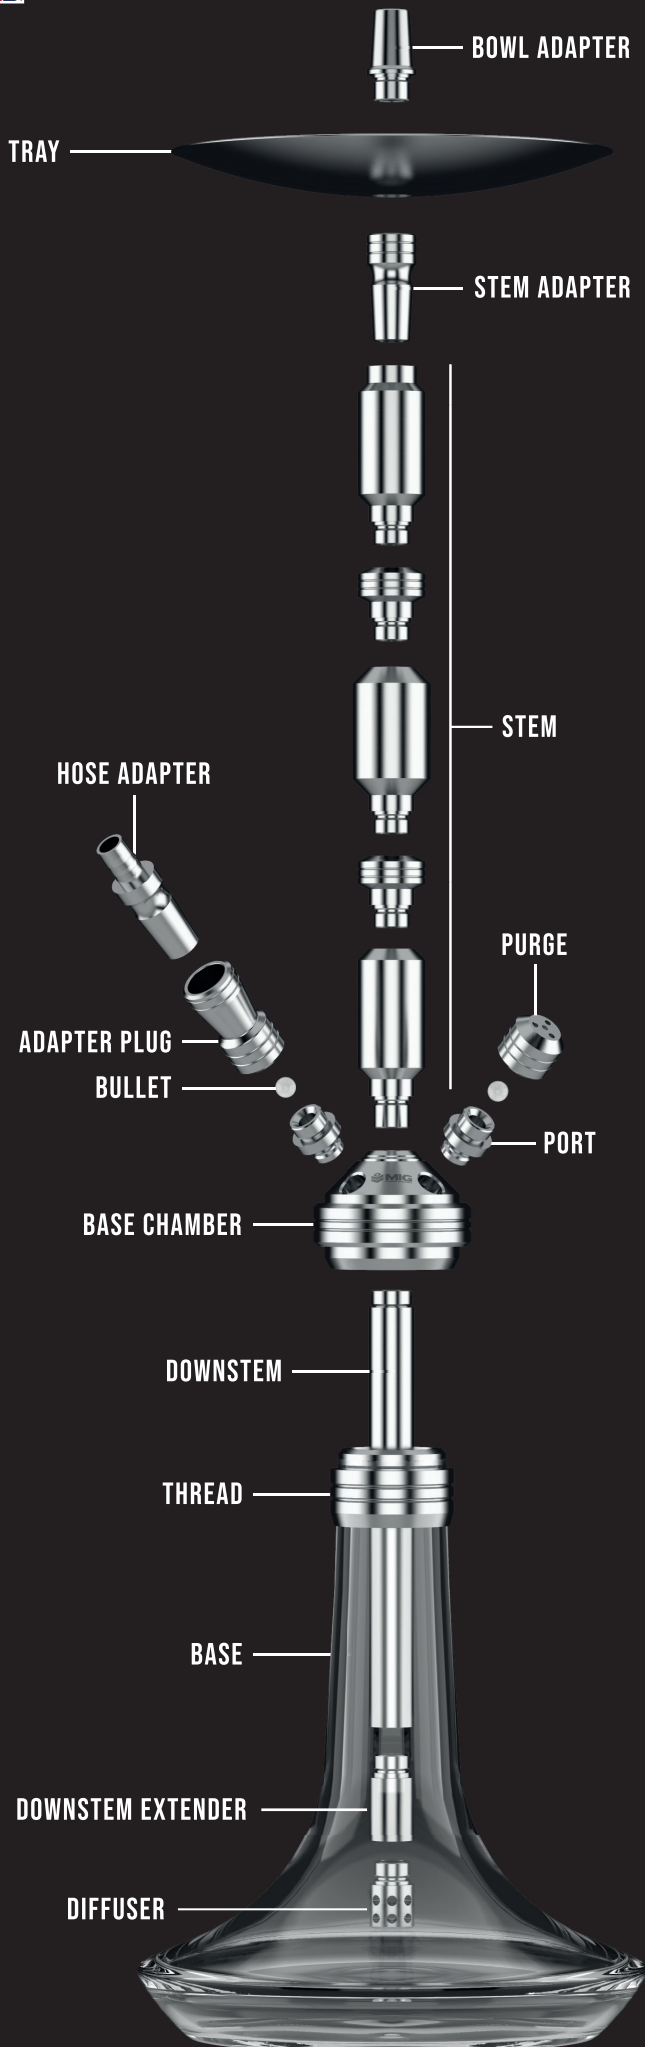

ASSEMBLY INSTRUCTIONS

STEP 1

Screw the **stem** into the **base chamber**.

STEP 2

Screw the **downstem** into the bottom of the **base chamber**. If there is a **diffuser** and/or a **downstem extender** in the delivery, also attach it to the bottom of the **downstem**.

IMPORTANT: The bottom of the downstem has a thread. This thread is exactly suitable for the diffuser.

STEP 3

Now fill the **base** with cold water. You can easily determine the correct water level. The **downstem** or the **diffuser** should be approximately 2 cm inside the water.

STEP 4

When you have screwed the **stem**, **base chamber** and **downstem** together, you can now attach the parts to the **thread** of the **base** and screw them tightly. While assembling the parts, please always make sure that the **downstem** does not hit the **thread** or the **base** during assembly. This can damage the parts.

STEP 5

Now screw the **port** into the hole of the **base chamber**, put the **bullet** inside and screw the **adapter plug** or the **purge** on that **port**. Repeat that step depending on how much **adapter plugs** or **purges** you have.

STEP 6

If you have ordered a hookah with a **stem adapter**, insert it from above into the **stem**. If your hookah does not have a **stem adapter**, you can ignore this step.

STEP 7

Now place the **tray** with one hand on top of the **stem** or the **stem adapter** and screw it hand-tight to the **bowl adapter**. Your bowl will be attached here later.

STEP 8

Now insert the **hose adapter** into the **adapter plug**. The hose will be attached to the **hose adapter** later.

Done! Enjoy smoking.